
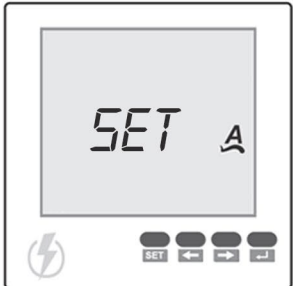
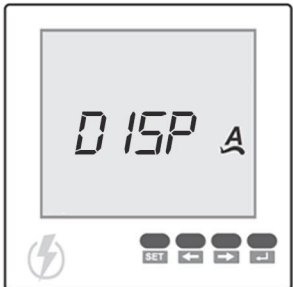
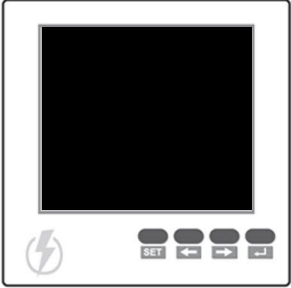





Operation for Fixing Accuracy of Ampere Meter

Steps		Screen Display
1.	Turn ON the Power	 <p>The screen displays '0000 A' with a lightning bolt icon at the bottom left and control buttons (SET, left arrow, right arrow, and a square button) at the bottom right.</p>
2.	Long press SET button for 3 sec, you will see the screen showing "SET"	 <p>The screen displays 'SET A' with a lightning bolt icon at the bottom left and control buttons at the bottom right.</p>
3.	Then short press the "SET" button, the screen will now show "DISP"	 <p>The screen displays '015P A' with a lightning bolt icon at the bottom left and control buttons at the bottom right.</p>

Steps		Screen Display
4.	Press ← button, the screen will turn black.	
5.	Then press SET button to enter Settings, you will see 0000, and the current setting will flash.	
6.	Use button "SET" and "←" to select and enter "3020" code, press  to confirm the setting.	
7.	The standard current input should be 5A.	