


SET UP GUIDE FOR AMPERE METER

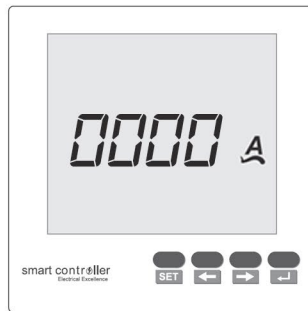


Instruction Manual










CT SETTING:



The CT option sets the current ratio (1~9999) and secondary current (1A or 5A) of the current transformer (CT) that wires to the meter.

Current Ratio = Primary Current / Secondary Current

1.	TURN THE POWER ON	
2.	Press,  you will see the screen as right image	
3.	Then Press  , you will see digit is flash as image 1, use  or  to select 8 and use  to enter next digit. Finish entering 8888 as right images 3.	

3.

Press , then  to enter CT ratio setting,
Then press , you will see digit in flashing as the image 1,
use  or  to select and use  to enter next digit.
When finish, set  exit.

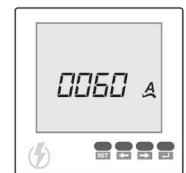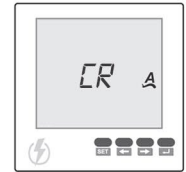

The range is from 0001 ~ 9999.
For example: if set the ratio to be 60,
that means the primary current is secondary current x 60 =300A