


SET UP GUIDE FOR VOLT METER

Instruction Manual

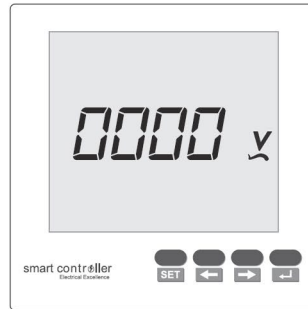

PT Setting

The PT option sets the current ratio (1 ~ 9999) and secondary current (PT2 100 ~ 500A) of the Voltage transformer (PT) that wires to the meter.

PT Ratio = Primary Voltage / Secondary Voltage

1.	TURN THE POWER ON	
2.	Press, you will see the screen as right image	
3.	<p>Then Press , you will see digit is flash as image 1,</p> <p>use or to select 8 and use to enter next digit.</p> <p>Finish entering 8888 as right images 2.</p>	

3.

Press , then  to enter PT ratio setting,

Then press , you will see digit in flashing as the image 1,

use  or  to select and use  to enter next digit.

When finish, set  exit.

The range is from 0001 ~ 9999.

For example: if set the ratio to be 100, that means the primary voltage is secondary voltage x 100

