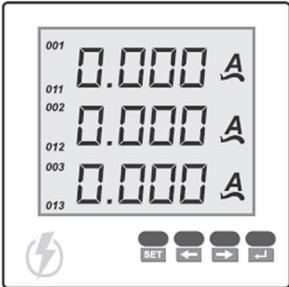
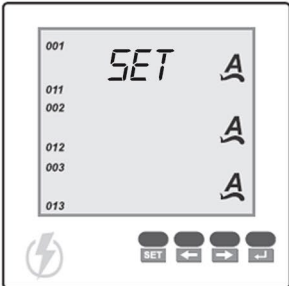
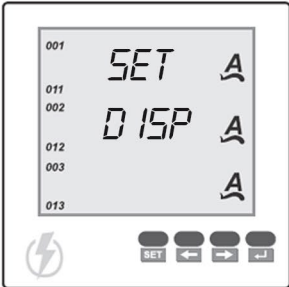
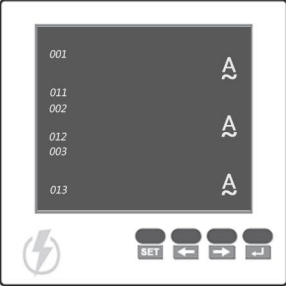
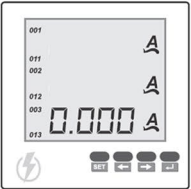



# Operation for Fixing Accuracy of Three Phase Ampere Meter

Steps		Screen Display
1.	Turn ON the Power	
2.	Long press SET button for 3 sec, you will see the screen showing "SET"	
3.	Then short press the "SET" button, the screen will now show "DISP"	

Steps		Screen Display
4.	Press ← button, the screen will turn black.	
5.	Then press SET button to enter Settings, screen will now show 0000, and the current setting will flash, use button " SET" and ← and → to select and enter the code "3032", press ↵ to confirm the settings.	 
6.	<b>The standard current input should be 5A.</b>	