


# SET UP GUIDE FOR 3 PHASE VOLT METER

## Instruction Manual

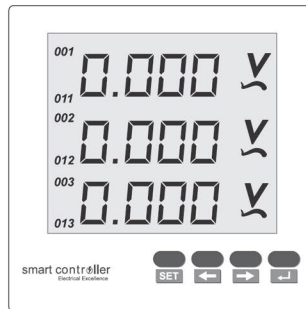

### Keys:

There are four keyboard buttons

	Menu editor or the value of bit shifted to the right (in the digital input mode)
	Menu items on the move or incremental value
	Menu item down or diminishing value
	Used for menu moving backward, the parameter is set back off and save your settings.

### PT Setting

The PT option sets the voltage ratio (1~9999) and secondary voltage (PT2 100~500V) of the Voltage transformer (PT) that wires to the meter.


PT Ratio = Primary Voltage / Secondary Voltage




1.	TURN THE POWER ON	
2.	Long Press  for 3 seconds, you will see the screen as right image, enter SET menu	


3.

Use  to find the set screen as right image 1, and press 

and  to enter PT ratio setting screen as image 2.

Then press  you will see digit is flashing as image 3.

Use  or  to select and use  to enter next digit.

When finish, set  exit.

The range is from 0001 ~ 9999.

For example: if set the ratio to be 60, that means the primary voltage is secondary voltage x 60

