

smartcontroller

Electrical Excellence



SETUP MANUAL

AMPERE METER




SET UP MANUAL FOR AMPERE METER


CT SETTING


The CT option sets the current ratio (1~9999) and secondary current (1A or 5A) of the current transformer (CT) that wires to the meter. Current ratio = Primary current / Secondary current


Turn The Power On.

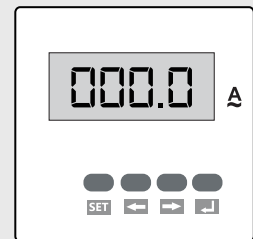

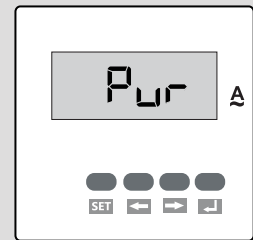


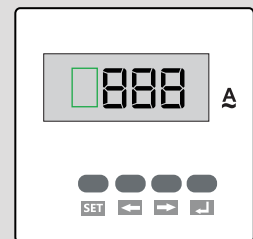
Press  you will see the screen as right image.

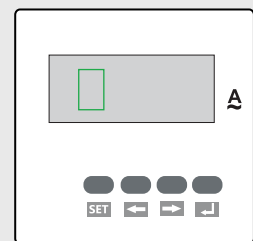

Then Press  you will see digit os flash as the image.





Use  or  to select 8 and use  to enter next digit. Finish entering 8888 as right image.





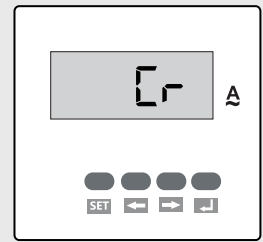


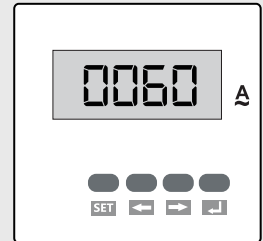
Press  then  to enter CT ratio setting.



Then Press  you will see digit is flashing as the image

Use  or  to select and use  to enter next digit.

When finish "SET" exit.



The Range is from 0001 ~ 9999. For example:
if set the ratio to be 60, That means the Primary
Current is Secondary Current x 60 = 300A.



UNIT C7/4 Inchinnan Industrial Park
Glasgow, Renfrewshire PA49RJ,
UNITED KINGDOM



info@smart-controllers.com



www.smart-controllers.com

