

smartcontroller

Electrical Excellence



ACCURACY FIXING

VOLT METER





SET UP MANUAL FOR VOLT METER


PT SETTING


The PT option sets the current ratio (1 ~ 9999) and secondary current (PT2 100 ~ 500A) of the Voltage transformer (PT) that wires to the meter. $PT \text{ ratio} = \text{Primary Voltage} / \text{Secondary Voltage}$


Turn The Power On.

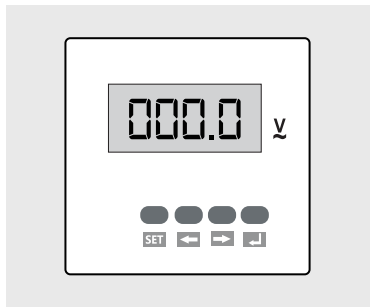

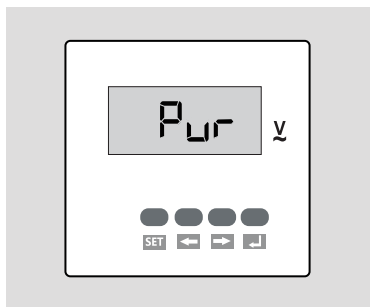


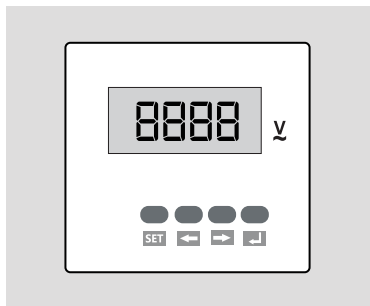
Press  you will see the screen as right image.

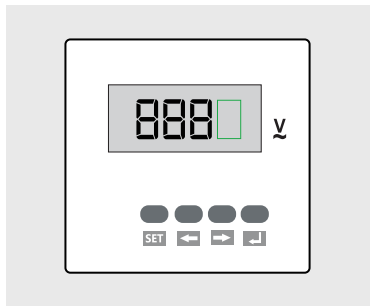

Then press  you will see digit on flash as the image.





Use  or  to select 8 and use  to enter next digit. Finish entering 8888 as right image.







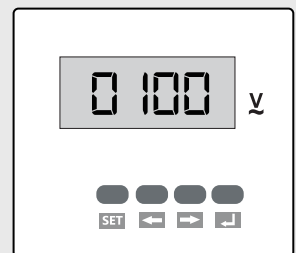
Press  then  to enter CT ratio setting.

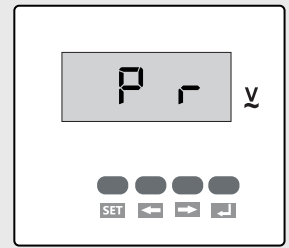

Then Press  you will see digit is flashing as the image

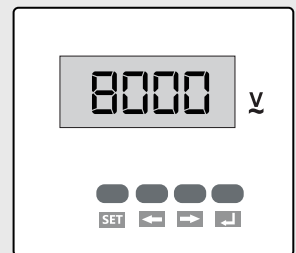

 or  to select and use  to enter next digit.
When finish, set  exit.



The Range is from 0001 ~ 9999. For example:
if set the ratio to be 100, that means the primary
voltage is secondary voltage x 100.



UNIT C7/4 Inchinnan Industrial Park
Glasgow, Renfrewshire PA49RJ,
UNITED KINGDOM



info@smart-controllers.com



www.smart-controllers.com

